


Before you begin, please read the assembly instructions in full

Building a unit(s) with a backboard

In the pack:

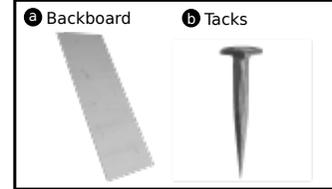


Tools required:




Notes

If using an outer upright(s) ensure it is facing the correct way before securing the backboard.


If using a plinth(s), fix to the bottom shelf first before starting to setup your unit(s).

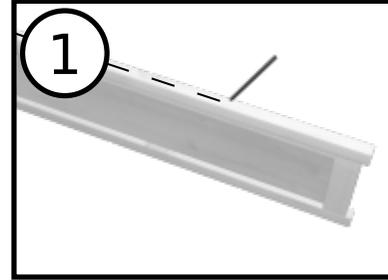


Mark the centre of the uprights in several places with a pencil. This will ensure the unit remains square. The backboard fits centre to centre on the upright.

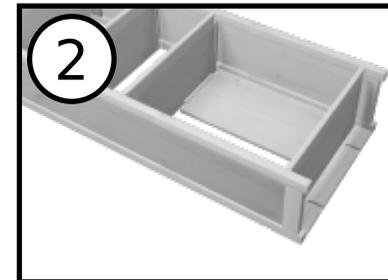


Setup two uprights and 3-4 shelves (including the top and bottom shelf). Use a spare shelf as a square.

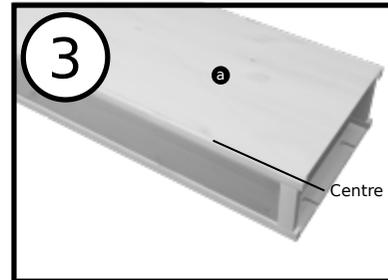


Carefully lay the backboard **a** on top of the unit ensuring the edge of the backboard is running down the centre of the upright.

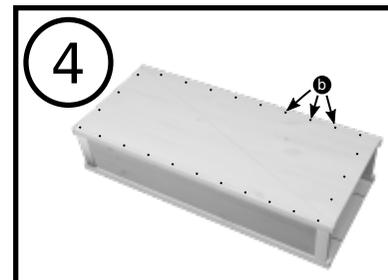

Tack **b** the backboard to the uprights and top and bottom shelves.

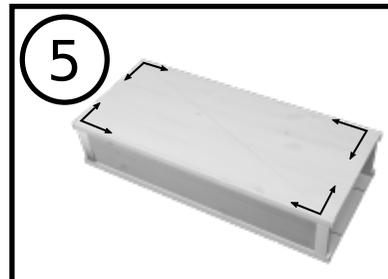

Start in one corner and work outwards approx' every 15/20cm.

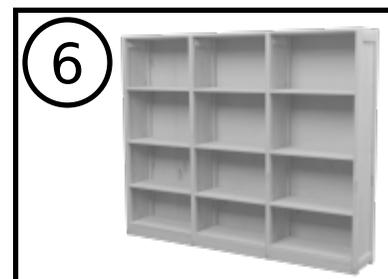

You can now stand the unit up and add more shelves, or move them around as required.

If building a run of units, only build the first one on the floor.



Units over 183cm high and under 30cm deep must be secured to the wall using wall attachments.