

Depth 4mm.

Backboards have an A & B side.

Constructed of pine ply with a 2mm MDF sandwich, e.g. ply-mdf-ply.

Tip: Pre-tack the backboard before fixing down.

We recommend 2 people when fixing.


Note: There is no groove or slot to place the backboard into, this is because there is no front or back to the uprights.

shelfstore

shelfstore.co.uk

Backboard FAQs

Q: Why does the backboard only go 50% of the way across the uprights?

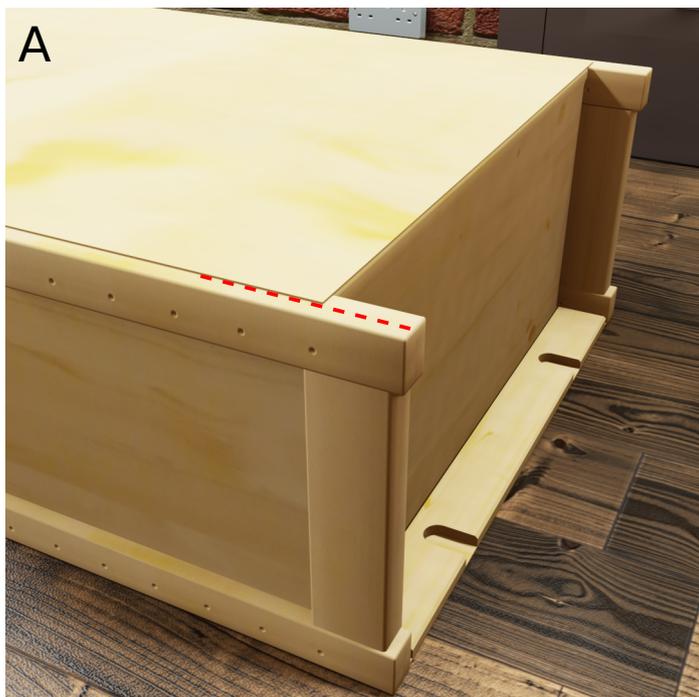


A: This is to accommodate for other backboards when you have more than one bay.

Q: How do I keep the bay square as I fit the backboard?



A: Put some shelves into the bay with some shelf supports and use a shelf as a square like this.

Q: Should I fit all the backboards to all the bays before putting into place?

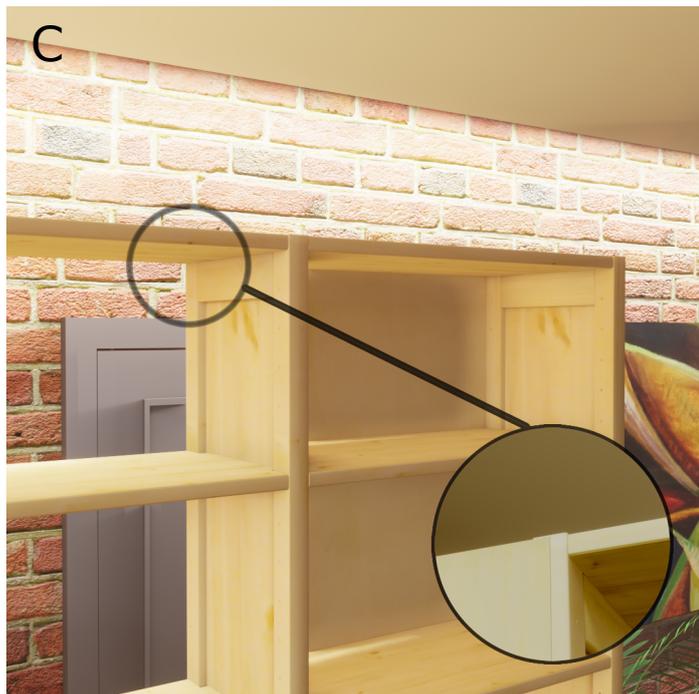

A: No, fit the first bay on the floor, stand the first bay up near to where you wish to position your system away from the wall, then add the remaining backboards (see assembly instructions). When all the backs are tacked in place, carefully slide into position.

Q: How many tacks should I use to fix the backboard down?



A: Tacks should be used 15cm/20cm apart around the edge working from the corners.